

HYE125MHU COMPRESSOR

TECHNICAL SPECIFICATION

(220-240 ~ 50Hz)

CHANGHONG HUAYI COMPRESSOR CO.,LTD.

2025.12

INDEX

	page
1、Compressor Type.....	2
2、Performance Data.....	2
3、Running Condition.....	2
4、Compressor Mechanical Information.....	3
5、Compressor Shape.....	3
6、Wiring Diagram.....	4
7、Fixing of mounting bracket and cabinet base.....	4
8、Starter relay and Thermal protector.....	5
9、Delivery State.....	6
10、Package、Storage and Transportation.....	6
11、Technical Items.....	7

1. Compressor Type

Compressor model	HYE125MHU
Rated voltage/frequency	220-240 ~ 50Hz
Refrigerant	R600a
Application	Low back pressure (LBP)
Cooling method	Static Cooling
Control device	Capillary tube
Motor type	RSIR(PTC)
Capacitor	

2. Performance Data

Displ.(cm ³)	Capacity(W) ≥95%	Inp.Pow.(W) ≤115%	Rated Current(A) ≤110%	COP(W/W) ≥95%	Frequency (HZ)
12.1	210	155.6	1.1	1.35	50

Testing condition:

Test conditions	LBP
	ASHRAE
Evaporating Temp.	-23.3℃
Ambient Temp.	32.2℃
Condensing Temp.	54.4℃
Suction Temp.	32.2℃
Subcooling Temp.	32.2℃


3. Running Condition

Ambient temp.	0 ~ 43℃
Evaporating temp.	-35 ~ -10℃
Voltage range	85 ~ 115V
Max. condensing temp.	65℃
Max. winding temp.	130℃
Max. shell temp.	95℃
Max. discharge temp.	110℃

4. Compressor Mechanical Information


Oil type	Mineral
Oil charged	160 ± 10ml
Diameter of suction tube (I.D.)	$\Phi 6.1^{+0.1}_0$ mm
Diameter of discharge tube(I.D.)	$\Phi 4.9^{+0.1}_0$ mm
Diameter of process tube (I.D.)	$\Phi 6.1^{+0.1}_0$ mm
Material of suction tube, process tube and discharge tube	copper tube
Compressor noise	≤42dB
Vibration	≤0.7m/s ²

5. Compressor Shape (connections on suction and process can not be inverted)

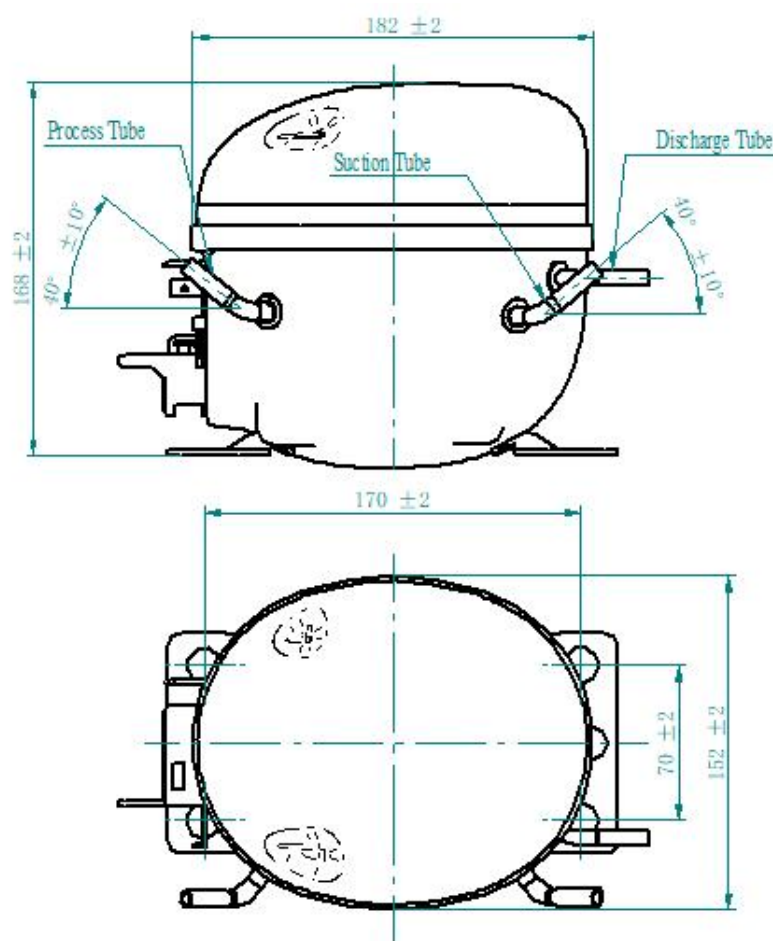


6. Wiring Diagram

RSCR:

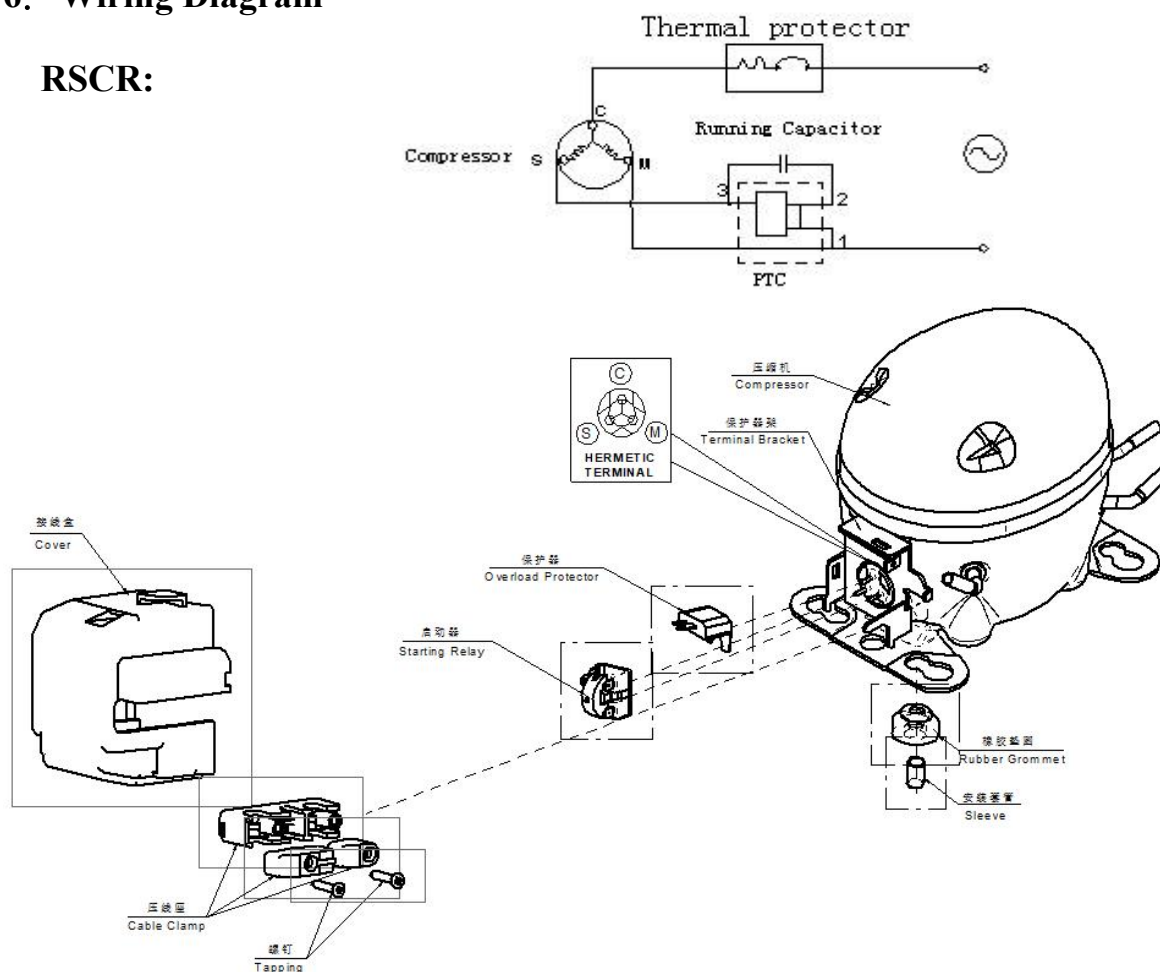

Note: Each of the starting relay、the thermal protector、 the spring tap、the terminal cover and the screw assembly is separately provided by our company.

7. Fixing Of Mounting Bracket And Cabinet Base

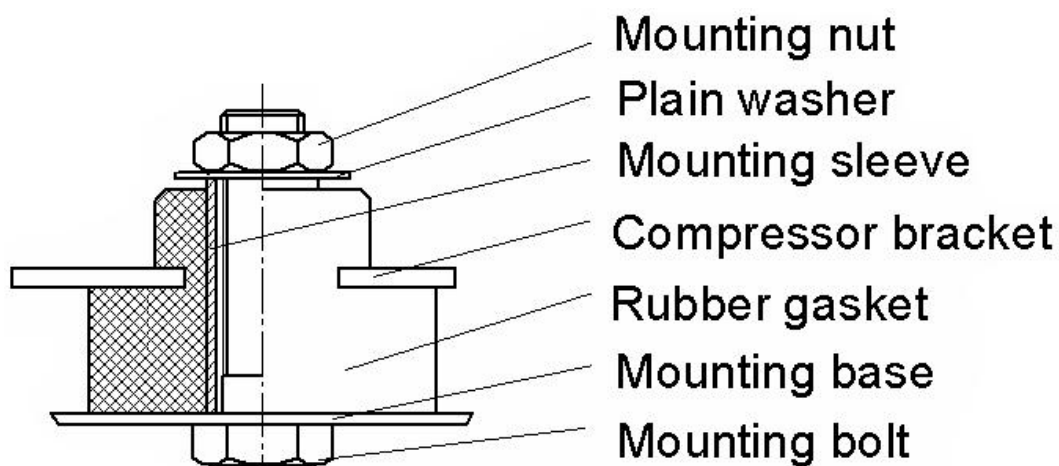


8. starter relay and Thermal protector

8.1 Starting relay

Model: QP2-12

Type:PTC

Compressor type			HYE125MHU
Starting relay	Type		QP2-12
	Trip Time	S	0.15 ~ 1.2
	Reset time	S	< 80
	Max. working voltage	V	350
	Max current	A	8

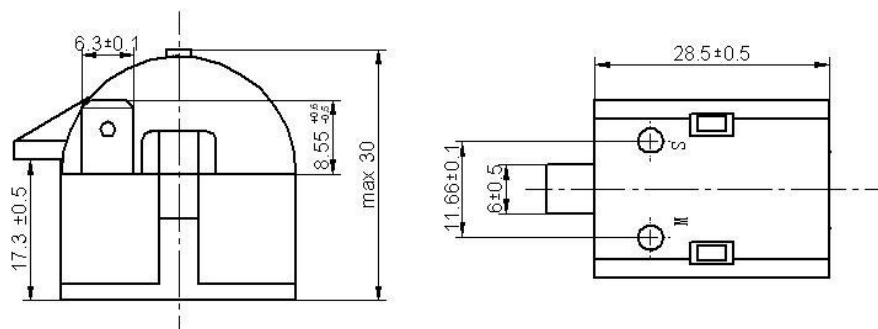


Installation force:98N、Unload force: 25N、Flame retardant grade:UL94-V0

8.2 Overload protector

Model: BT62-135

Compressor model			BT62-135
OverloadP rotector	Max.T.C Amp.(25℃)	A	6.2
	Trip time	S	6 ~ 14
	Reset time	S	35 ~ 150
	Open temp.	± 5℃	135
	Close temp.	± 9℃	61
	Min. T.C. Amp.(70℃)	A	1.62 ~ 2.10

Flammability:Anti-flammability

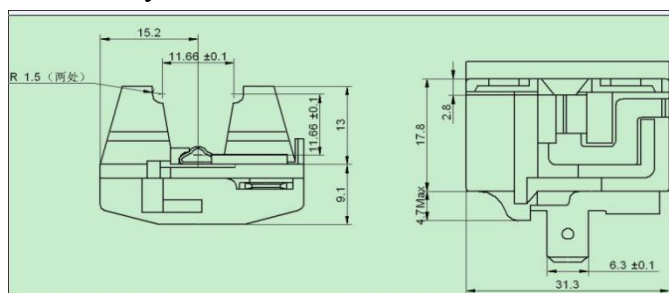

9.Delivery State

No.	Name	Model	Quantity	CODE
1.	Compressor	HYE125MHU	1pcs	
2.	MOUNTING ACCESSORIES			
2.1.	Rubber Gasket	E.24.12.201S	4 pcs	
2.3.	Mounting S	CTE943-2	4 pcs	
3.	ELECTRICAL ACCESSORIES			
3.1.	Starting Relay	QP2-12	1 pcs	
3.2	Thermal Protector	BT62-135	1 pcs	
3.3	Terminal Cover	E.14.01.59	1 pcs	
3.4	Screw Assembly	E.14.24.201	1 pcs	E.14.24.201
3.5	Running capacitor	/	/	

Notes:1.All electrical parts and equipment assembly are supplied separately, not installed on the compressor.

2.All electrical parts and equipment assembly according to Delivery states are all provided by our company.

10. Package、Storage and Transportation

Package type	unreusable
Quantity	72pcs/box
Transportation	By truck or train
Storage	Max. 2 layers
Volume m ³	1.09
Dimension: length×width×height (mm)	1120 × 910 × 1070
Main components	Wooden supporter、foam divider、plastic sheet、cardboard cover、wrapping
Movement	Keep the compressor in normal or vertical position (a short time before compressor installed in the refrigerator).
Trans. test requirement	No allowable compressor's damage and performance loss.

11. Technical Items

1. After pulling off rubber plugs from the compressor tubes, please connect the compressor to the refrigeration system within 5 minutes. It is advisable to take off the first plug from process tube. No dust or humidity in the air is permitted to enter the compressor.
2. Earth connection should be fixed permanently and reliably.
3. The compressor must be mounted horizontally without tilting an angle more than 5 ° .
4. Maximum operating ambient temperature is at 43°C.
5. When the compressor starts, balance pressure inside refrigeration system must be less than 0.3Mpa (Absolute).
6. The compressor must not be restarted unless at an interval of more than 5 minutes.
7. Please keep the compressor always vertically and never upset it during transportation while avoiding any vibration and shock.
8. Please store the compressor in a dry and ventilated place and keep it away from any humidity.
9. Please follow the transportation warning marks on the package for layer limitation. Do not roll the whole packages when loading or unloading.
10. Storage expiry is 6 months from the date of production. If it expired, please check the nitrogen pressure inside compressor and recharge it when it is necessary.